

Instruction Manual

SC500A, SC1000A, SC2000A



Note: Owner/Operator must read and understand this instruction manual before using the shop crane

RevA: 04/2007

Specifications

Model	SC500A	SC1000A	SC2000A
Capacity (kg)	500	1000	2000
Max.Beam Length (mm)	1095	1570	1595
Min.Beam Length (mm)	895	1270	1295
Max.Hook Height (mm)	2170	2500	2550
Min.Hook Height (mm)	295	250	175
Net Weight (kg)	80	118	165

Safety Instructions

1. Use cranes only on a firm level; never use on soft grounds.
2. The load to be lifted should never exceed the rated capacity.
3. Never operate the hydraulic power unit beyond its maximum stroke indicated on the label.
4. The capacity of the crane reduces as the jib extension is prolonged. Do not load the crane beyond the rated capacity for each specified jib extension position as indicated in the label.
5. Before operating the crane ensure the jib extension is securely positioned by the pin (NO.9).
6. The load hook is provided with a latching mechanism. Ensure it works properly.
7. To lift the load in a well balanced and stable way make sure the center of gravity remains always inside the crane base.
8. Never position any part of your body under the load.
9. Do not allow the load to swing or drop violently when moving.
10. The crane is not transportation device but in case the load has to be removed, lower the load and jib extension to the lowest possible point before transporting. The crane is not designed to

sustain the load indefinitely, so when the operation is finished make sure the load is fully lowered and supported on a firm surface.

11. Make a visual inspection before each use the crane. Any crane which appears to be damaged must be removed from service.
12. As an additional safety feature the crane is equipped with a valve to prevent the unit from being overloaded. This unit must not be tampered with.
13. If these basic rules are not followed, injury to the user, the crane or the load being lifted may result.

Use and operation

1. Before using the crane, it is necessary to purge air from the valve system of the hydraulic unit.
2. This can be done by releasing the valve, then pumping the hydraulic jack several times.
3. Closing the valve, the crane is now ready to be used. Swivel the hydraulic unit a suitable operating position.
4. Raising the load, close the valve and pump the hydraulic unit. Quick lifting is prohibited for loads of more than 150kgs. Any manipulation of the pressure relief valve is prohibited.
5. Lowering the load, release the valve slowly, the load can be lowered smoothly. Quick-releasing is strictly prohibited.

Maintenance

1. Lubricate all moving parts at regular intervals.
2. Always keep the crane clean and protected from aggressive conditions.
3. Check the oil level of the hydraulic unit with the piston fully

retracted. Top up if necessary.

IMPORTANT : An excess of oil will render the crane inoperative.


4. Use only hydraulic oil, HL or HM types, with an ISO grade of cinematic viscosity of 30 cSt at 40° C or an Engler viscosity of 3 at 50° C.

VERY IMPORTANT : never use brake fluid.

5. When ordering spare parts, please state the part number as shown in the exploded view drawing provided, the model number and the capacity of the crane.

REPAIR


Both maintenance and repair must only be carried out by qualified personnel.

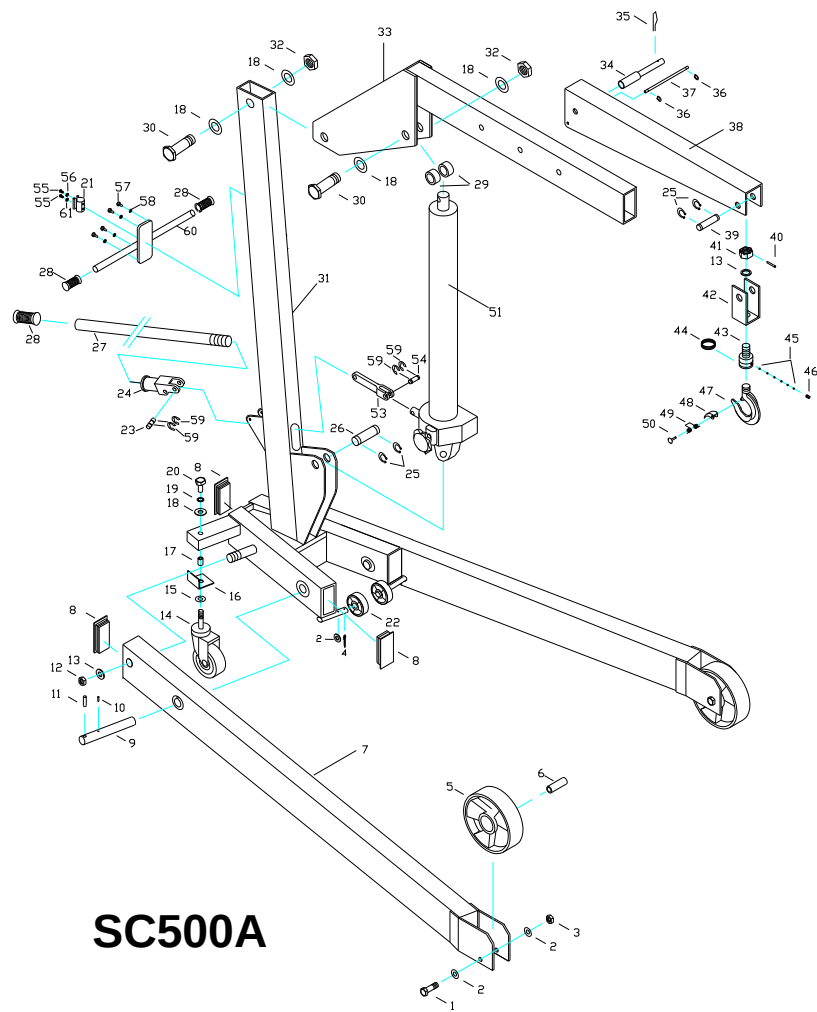

SC500A

Parts List (SC500A)


No	Description	Qty	No	Description	Qty
1	Screw	2	2	Washer	8
3	Nut	2	4	Pin	4
5	Front wheel	2	6	Wheel axle	2
7	Leg	2	8	Cover	7
9	Pin	2	10	Spring pin	2
11	Spring pin	2	12	Nut	2
13	Washer	3	14	Steering wheel	2
15	Washer	4	16	Cover	2
17	Spacer	2	18	Washer	6
19	Spring washer	2	20	Screw	2
21	Spring seat	1	22	Wheel	2
23	Pin	1	24	Socket	1
25	Snap ring	4	26	Pin	1
27	Handle	1	28	Hand grip	3
29	Spacer	2	30	Screw	2
31	Base	1	32	Nut	2
33	Boom	1	34	Pin	1
35	Spring pin	1	36	Snap ring	2
37	Pin	1	38	Lifting arm	1
39	Pin	1	40	Pin	1
41	Nut	1	42	Hook seat	1
43	Hook bolt	1	44	Spring	1
45	Ball	12	46	Screw	1
47	Hook	1	48	Latch	1
49	Spring	1	50	Pin	1
51	Ram assembly	1	53	Linkage	1
54	Pin	1	55	Screw	2
56	Washer	2	57	Screw	2
58	Washer	2	59	Snap ring	4
60	Handle	1	61	Washer	2

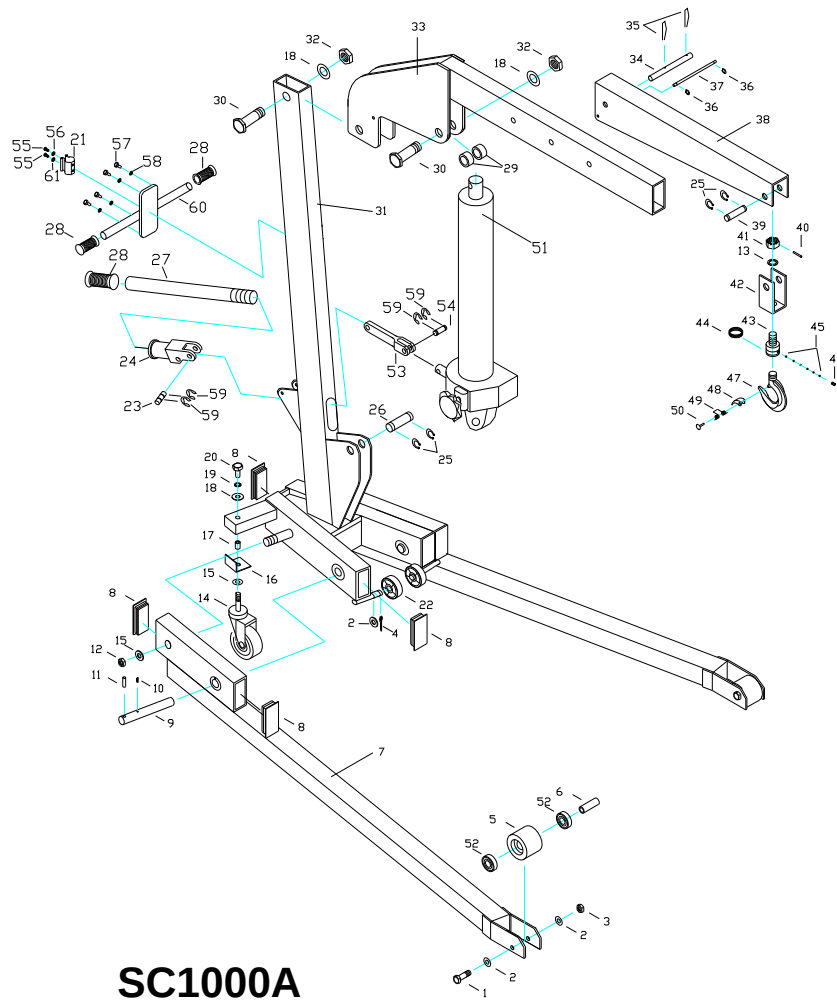

SC1000A

Parts List (SC1000A)


No	Description	Qty	No	Description	Qty
1	Screw	2	2	Washer	8
3	Nut	2	4	Pin	4
5	Front wheel	2	6	Wheel axle	2
7	Leg	2	8	Cover	9
9	Pin	2	10	Spring pin	2
11	Spring pin	2	12	Nut	2
13	Washer	1	14	Steering wheel	2
15	Washer	6	16	Cover	2
17	Spacer	2	18	Washer	4
19	Spring washer	2	20	Screw	2
21	Spring seat	1	22	Wheel	2
23	Pin	1	24	Socket	1
25	Snap ring	4	26	Pin	1
27	Handle	1	28	Hand grip	3
29	Spacer	2	30	Screw	2
31	Base	1	32	Nut	2
33	Boom	1	34	Pin	1
35	Spring pin	2	36	Snap ring	2
37	Pin	1	38	Lifting arm	1
39	Pin	1	40	Pin	1
41	Nut	1	42	Hook seat	1
43	Hook bolt	1	44	Spring	1
45	Ball	12	46	Screw	1
47	Hook	1	48	Latch	1
49	Spring	1	50	Pin	1
51	Ram assembly	1	52	Ball bearing	4
53	Linkage	1	54	Pin	1
55	Screw	2	56	Washer	2
57	Screw	2	58	Washer	2
59	Snap ring	4	60	Handle	1
61	Washer	2			

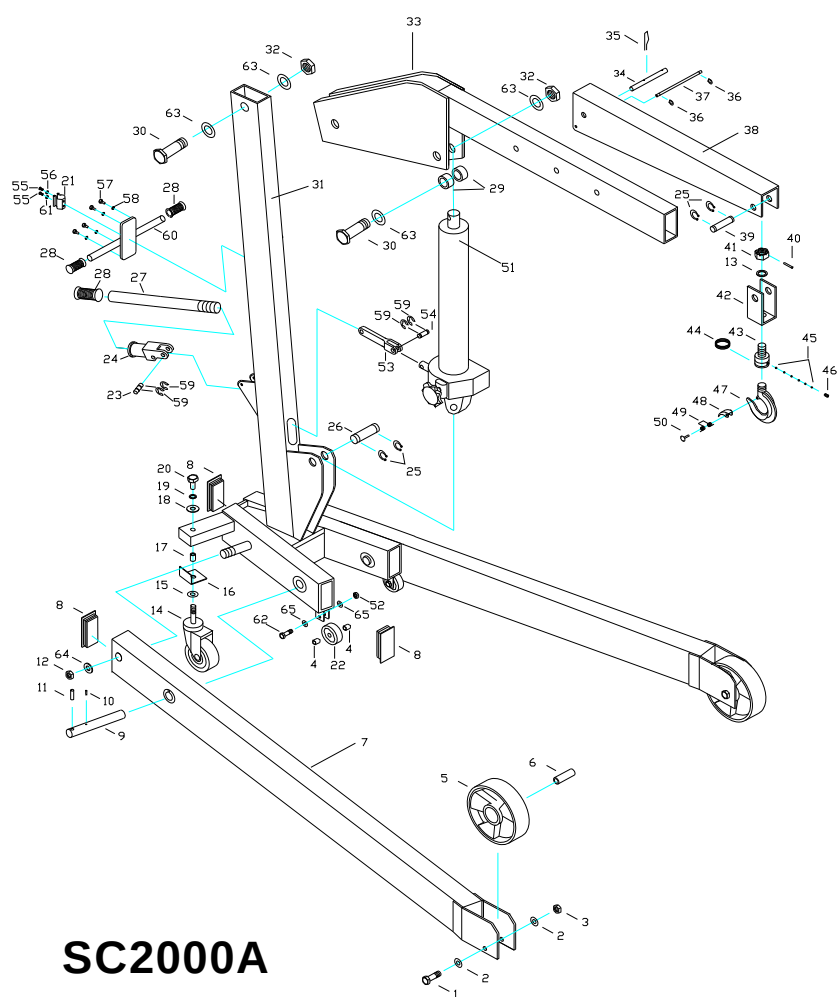

SC2000A

Parts List (SC2000A)

No	Description	Qty	No	Description	Qty
1	Screw	2	2	Washer	4
3	Nut	2	4	Spacer	4
5	Front wheel	2	6	Wheel axle	2
7	Leg	2	8	Cover	7
9	Pin	2	10	Spring pin	2
11	Spring pin	2	12	Nut	2
13	Washer	1	14	Steering wheel	2
15	Washer	4	16	Cover	2
17	Spacer	2	18	Washer	2
19	Spring washer	2	20	Screw	2
21	Spring seat	1	22	Wheel	2
23	Pin	1	24	Socket	1
25	Snap ring	4	26	Pin	1
27	Handle	1	28	Hand grip	3
29	Spacer	2	30	Screw	2
31	Base	1	32	Nut	2
33	Boom	1	34	Pin	1
35	Spring pin	2	36	Snap ring	2
37	Pin	1	38	Lifting arm	1
39	Pin	1	40	Pin	1
41	Nut	1	42	Hook seat	1
43	Hook bolt	1	44	Spring	1
45	Ball	12	46	Screw	1
47	Hook	1	48	Latch	1
49	Spring	1	50	Pin	1
51	Ram assembly	1	52	Nut	2
53	Linkage	1	54	Pin	1
55	Screw	2	56	Washer	2
57	Screw	2	58	Washer	2
59	Snap ring	4	60	Handle	1
61	Washer	2	62	Screw	2
63	Washer	4	64	Washer	1
65	Washer	4			

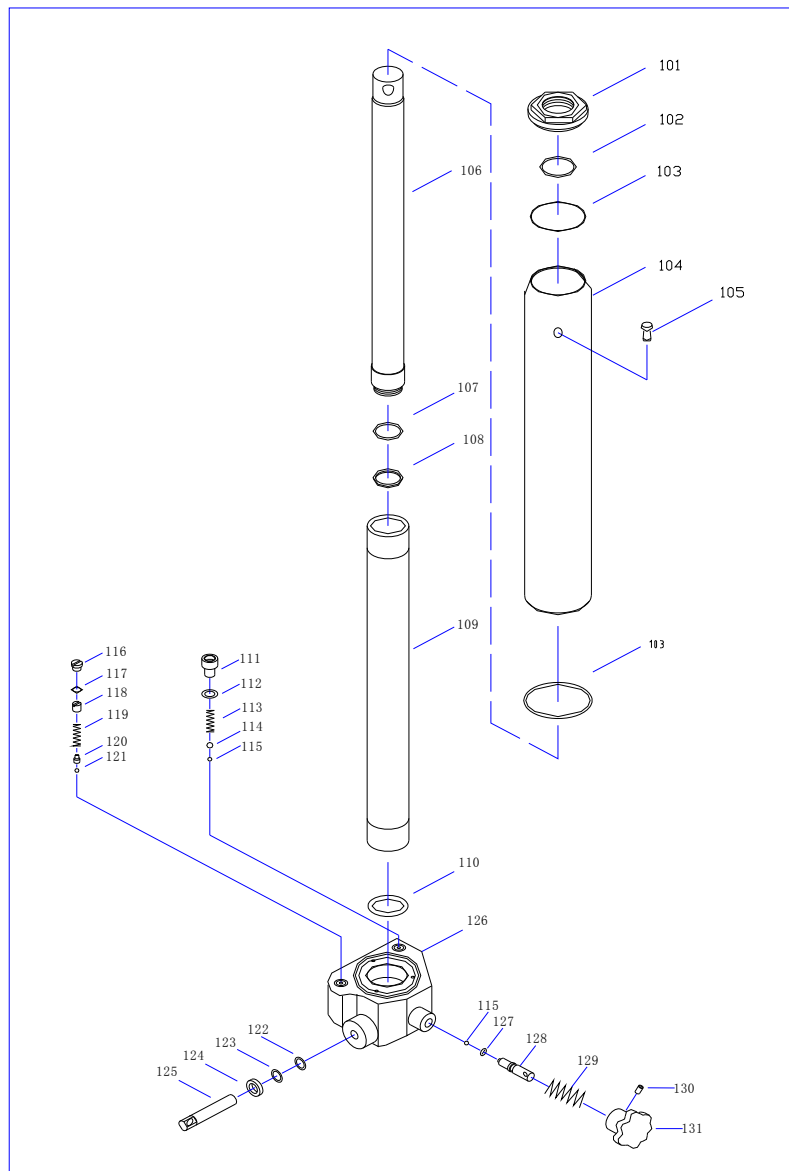

Parts List (Pump assembly)

No	Description	Qty	No	Description	Qty
101	Cylinder Head	1	102*	O-Ring	1
103*	Square-Ring	2	104	Reservoir	1
105*	Oil Plug	1	106	Piston Rod	1
107*	O-Ring Retaining	1	108*	O-Ring	1
109	Cylinder	1	110*	Washer	1
111	Screw	1	112*	Washer	1
113	Spring	1	114	Ball	1
115	Ball	2	116	Screw	1
117*	Washer	1	118	Screw	1
119	Spring	1	120	Seat	1
121	Ball	1	122*	O-Ring	1
123*	Scraper Ring	1	124*	Snap Ring	1
125	Pump	1	126	Valve Block	1
127*	O-Ring	1	128	Release Indicator	1
129	Spring	1	130	Screw	1
131	Release Knob	1			
NOTE: *Included in the repair kit					